Errata

1. In the TS 1.3.9 Rev 1d manual, page 375:

There is an extra zero in Step 2 below: *Incorrect* Step 2: Reset the configuration by executing the commands: echo 0 > /proc/flash/script reboot

Correct

Step 2: Reset the configuration by executing the commands:

echo > /proc/flash/script

reboot.....

2. In the TS 1.3.9 Rev 1d manual, page 279:

A regular user who wants to run the command su - to become a superuser needs to:

Step 1: Make sure the group "wheel" is already created (administrator with root access would run the following command: addgroup wheel). In file /etc/group there should be a line with at least ...wheel::zzz:

Step 2: Belong to the group "wheel" (administrator with root access would edit /etc/group file and insert the username at the end of the "wheel" line) e.g. For user "steve", the administrator would edit the line in file /etc/group.

wheel::zzz:

to add "steve" at the end like this:

wheel::zzz:steve